

Checking and Adjusting Engine Idle Speed

Make sure the engine is at operating temperature



Set the ignition timing and idle mixture to the manufacturer's specifications



Connect a tachometer



If the manufacturer's idle speed is not showing on the tachometer, adjust the idle speed by turning the idle speed adjustment screw until the manufacturer's idle speed is obtained