

## **Procedure for removing and replacing a fuel filter**

**1. Disconnect fuel hose. Remove the fuel filter with the bracket**

**2. Install a new filter and reconnect the fuel hoses in the direction of the fuel flow**

**3. When installing the filter ensure that the fuel hoses are pushed on as far as possible. Secure the hoses with clamps**

**4. Run the engine and inspect for fuel leaks. Repair as necessary**