

Procedure for removing a spark plug

1. Remove spark plug wires from the spark plugs
Tools used in spark plug removal and installation are spark plug wrench and spark plug socket, extension & ratchet

2. Loosen each plug about one turn to break free any accumulation of carbon, dirt, or gravel that may be lodged around the shell.

3. Blow out spark plug ports with compressed air to remove dirt or gravel which may have collected around the base of the spark plug

4. Remove spark plugs using a spark plug wrench and place them in a suitable holder in the order they were removed from the engine