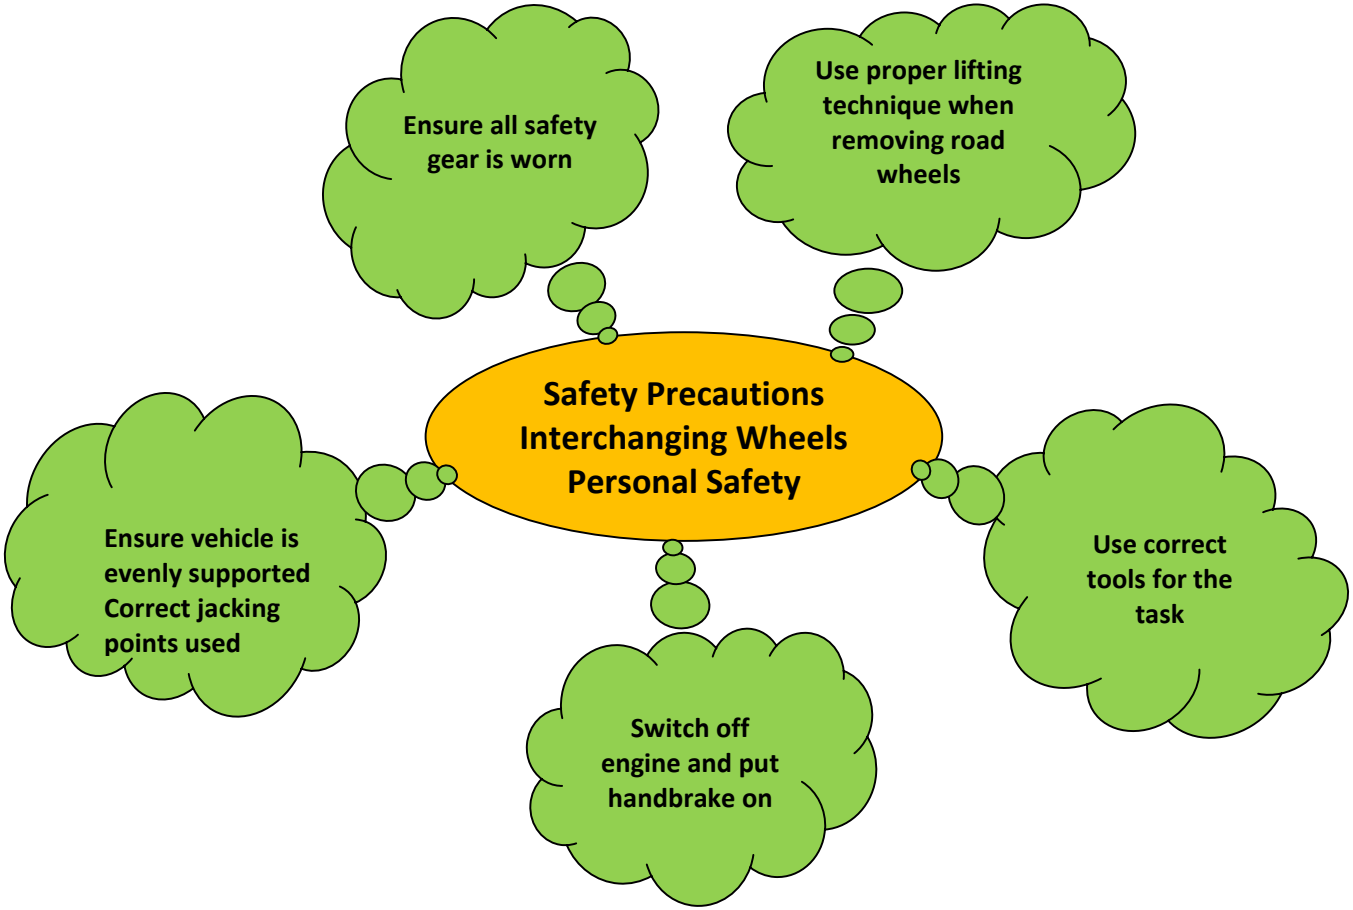
Safety Precautions
Interchanging Wheels
Personal Safety
Ensure all safety gear is worn
Use proper lifting technique when removing road wheels
Ensure vehicle is evenly supported
Correct jacking points used
Switch off engine and put handbrake on
Use correct tools for the task